

SERVICING AND MAINTENANCE INSTRUCTIONS FOR CONVAL CLAMPSEAL® VALVES WITH INDICATOR BUSHING

I. INSTALLATION

Follow the instructions for installation (Section I) given in:

CLAMPSEAL® GLOBE VALVES SERVICING INSTRUCTIONS

II. OPERATION

Follow the instructions for operations (Section II) given in:

CLAMPSEAL® GLOBE VALVES SERVICING INSTRUCTIONS

III. PACKING GLAND ADJUSTMENT

Follow the instructions for packing gland adjustment (Section III) given in:

CLAMPSEAL® GLOBE VALVES SERVICING INSTRUCTIONS

IV. MAINTENANCE

Follow the instructions for maintenance (Section IV) given in:

CLAMPSEAL® GLOBE VALVES SERVICING INSTRUCTIONS

V. REPAIR

Follow the instructions for repair (Section V) given in:

CLAMPSEAL® GLOBE VALVES SERVICING INSTRUCTIONS adding the following:

- (A) Between steps 3 and 4 under Section 5 of the Clampseal® Globe Valves Servicing Instructions. The checknut should be removed from the stem by threading it off. After removing the checknut thread off the indicator sleeve, proceed with instruction given in the repair (Section V) section of Clampseal® Globe Valves Servicing Instructions until reaching Subsection G Reassembly of Section V. In Subsection G between g and l, add: Close the valve tightly by screwing the stem down fully.

Replace the indicator sleeve by screwing it back on the stem, making sure that the bottom of the indicator sleeve is resting at "0" on the indicator tag. Then screw on the check nut. The check nut should be snug to lock the indicator sleeve in place.

Proceed with Subsection G (Reassembly) instructions in:

CLAMPSEAL® GLOBE VALVES SERVICING INSTRUCTIONS

SERVICING AND MAINTENANCE INSTRUCTIONS FOR CONVAL CLAMPSEAL® VALVES WITH INDICATOR BUSHING

I. INSTALLATION

Follow the instructions for installation (Section I) given in:

CLAMPSEAL® GLOBE VALVES SERVICING INSTRUCTIONS

II. OPERATION

Follow the instructions for operations (Section II) given in:

CLAMPSEAL® GLOBE VALVES SERVICING INSTRUCTIONS

III. PACKING GLAND ADJUSTMENT

Follow the instructions for packing gland adjustment (Section III) given in:

CLAMPSEAL® GLOBE VALVES SERVICING INSTRUCTIONS

IV. MAINTENANCE

Follow the instructions for maintenance (Section IV) given in:

CLAMPSEAL® GLOBE VALVES SERVICING INSTRUCTIONS

V. REPAIR

Follow the instructions for repair (Section V) given in:

CLAMPSEAL® GLOBE VALVES SERVICING INSTRUCTIONS adding the following:

- (A) Between steps 3 and 4 under Section 5 of the Clampseal® Globe Valves Servicing Instructions. The checknut should be removed from the stem by threading it off. After removing the checknut thread off the indicator sleeve, proceed with instruction given in the repair (Section V) section of Clampseal® Globe Valves Servicing Instructions until reaching Subsection G Reassembly of Section V. In Subsection G between g and l, add: Close the valve tightly by screwing the stem down fully.

Replace the indicator sleeve by screwing it back on the stem, making sure that the bottom of the indicator sleeve is resting at "0" on the indicator tag. Then screw on the check nut. The check nut should be snug to lock the indicator sleeve in place.

Proceed with Subsection G (Reassembly) instructions in:

CLAMPSEAL® GLOBE VALVES SERVICING INSTRUCTIONS